


1. **Passenger Side** – Pull Strap and the Backrest will fold forward.



2. **Driver Side** – Note the head rest post on the right side.
3. **Driver Side** – At the rear of the backrest, below that headrest post, there is a mechanic's lever to release the backrest.
4. **Driver Side** – Simply Pull the Round Metal Nub – Upwards to release it from the Cab Wall.

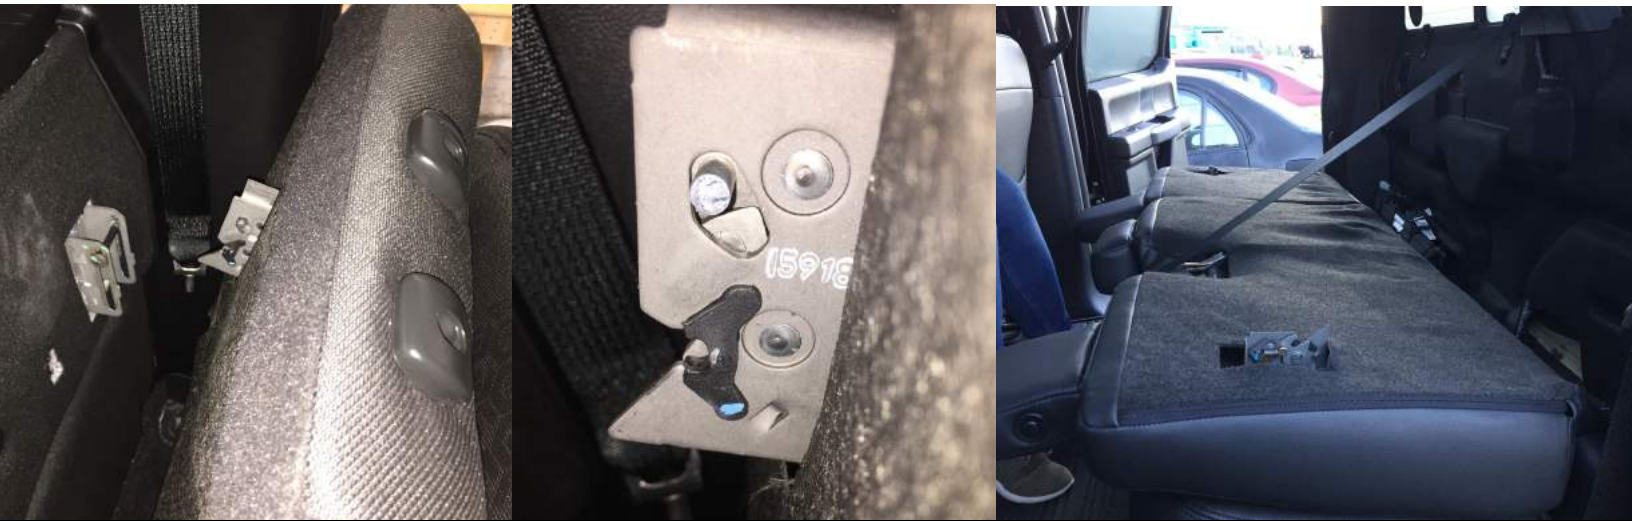

5. **Driver Side** – Pull the Handle on the Seat Cushion and the back rest and cushion will fold flat.